

Gary®

A member of the Fire King Security Group

800-457-2424 or 812-948-9400

fkinfo@fireking.com

Gary LT1507

page 1 (2)

Important remarks:

- Please keep codes in a safe place. Do not use personal data like birthdays, telephone numbers...
- Please keep key in a safe place but not in the safe itself.
- If the safe will not be used for a long time, please take out batteries.
- In case of any kind of questions, please connect with local service.

To Open the safe with key/to install batteries:

Uncover the round cap with a logo, a key hole will be seen. Insert the key, then turn it clockwise. The door will open automatically. In open position of the door, close the lock and remove the key. Take off the cover of the box holding batteries and place 4 batteries type AA/1,5V /Alkaline). According to "To Open the safe with user code" the locking bolts will be drawn back.

To replace batteries:

If the voltage of the batteries is deficient, the LED will show "LO-BAT" and the batteries have to be replaced. Please look at the environmental standards.

To Open the safe with the user code:

Enter the user code (pre-selected 1-6-8). The door will open automatically and at the same time the LED will show "OPENED".

To Open the safe with the master code:

Press # and enter the master code (pre-selected 123456) and press #. The door will open automatically and at the same time the LED will show "OPENED".

To Lock the safe without changing user code:

Close the door and hold it closed. Then press # only to lock the safe - the user code will remain unchanged / the same.

To Lock the safe and change the user code: **(CHECK HOW THIS WORKS!)**

Close the door and hold it closed. Enter the user code (pre-selected 1-6-8) and press #, the door will lock automatically and the LED will show "CLOSED". If you press # only to lock the safe the user code originally entered will remain unchanged / the same. **Caution:** If there is a barrier blocking the door, the LED will show "BLOCK" and the locking bolts draw back automatically. Remove the barrier and try again.

Gary®

A member of the Fire King Security Group

800-457-2424 or 812-948-9400

fkinfo@fireking.com

New User code:

page 2 (2)

To change the user code, the door must be open. Enter the new user code (any 3-6 digits) and press #. The LED will show **-DONE-**, then **-USER-**. The new user code will appear on the LED again finally.

New Master code:

To change the master code, the door must be open. Enter **"00"** and press #. The LED will show **"OLD"**. Enter the old master code (pre-selected 1 2 3 4 5 6), press #. The LED will show **"NEW"** and enter the new master code (any 3 – 6 digits), then press #. The LED will show **-DONE-**, then **"SUPER"**. The new master code will appear on the LED again at last.

Note: If you press **"*"** before any code number, the personal code number will not appear on the LED. The following sign **"- "** will appear.

To give an alarm for Error:

When the lock is closed, any incorrect entry code will be rejected. The LED will show **Error** and the buzzer will emit beeps. The third incorrect entry code starts a count timer ending after 5 minutes and at the same time the LED will show **"HOLD05"**. When counter timer reaches 5 minutes, a correct user or master code will be accepted. In case of entering a wrong digit, you can delete it by pressing **"*"**.

Installation:

Safe can be installed on the wall or on the floor.

Specification:

Size:	15.75" (W) x 7.68" (H) x 16.61" (D).
Weight:	Approx. 34 lb
Power supply:	4 batteries type AA/1,5V (Alkaline).
Working temperature:	14°F ~ 158°F
Working humidity:	20% ~ 95% rH ~ non-condensed

Rev. October 23, 2009 (use after Dec. 31, 2009)