




AUTOBANK

External Connection Instructions

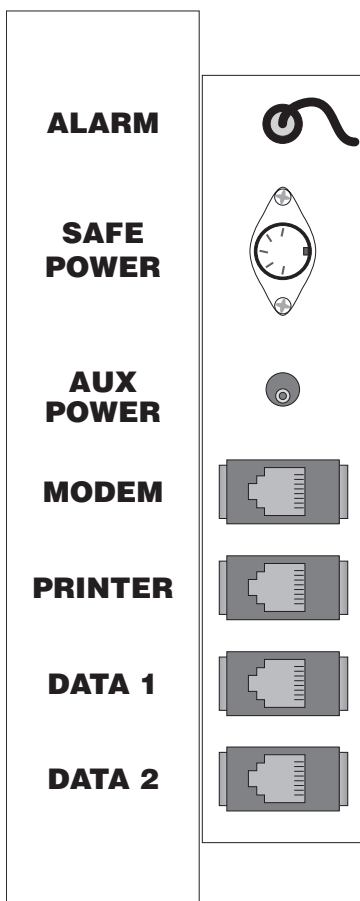

Safe Rear Panel Connections

Alarm: The unterminated cable, marked “Alarm,” may be connected to a store alarm system. The cable provides a “normally open” silent alarm signal which may be triggered by either duress or burglary.

Safe Power: Connect the external multi-level power supply to this five-pin jack. Connect the power supply’s inlet plug into a dedicated 115 Vac 15A outlet or NKL authorized UPS.

Aux Power: For V1 or V2 units: connect the validator power supply output to this jack. For EPR units: connect the EPR power supply output to this jack. Connect the power supply’s inlet plug into a standard 115 Vac 15A outlet.

Modem: This port is used for NKL Edge software connection.

Printer: Connect the 8-pin RJ45 cable from the Printer port on the safe to the RJ45 adapter provided with the serial printer. The adapter (RJ45/DB25) connects the printer cable to the 25-pin serial port on the rear panel of the printer.

Data 1/Data 2: Use the data port to connect to other AuditLok XLV safes or display units using standard RJ45-RJ45 cables. Be sure to follow the “Add Device” procedure when connecting new “R” devices. Data 1 and Data 2 are interchangeable.



a member of the FireKing® Security Group